


PWHR-30 / PWHR-40

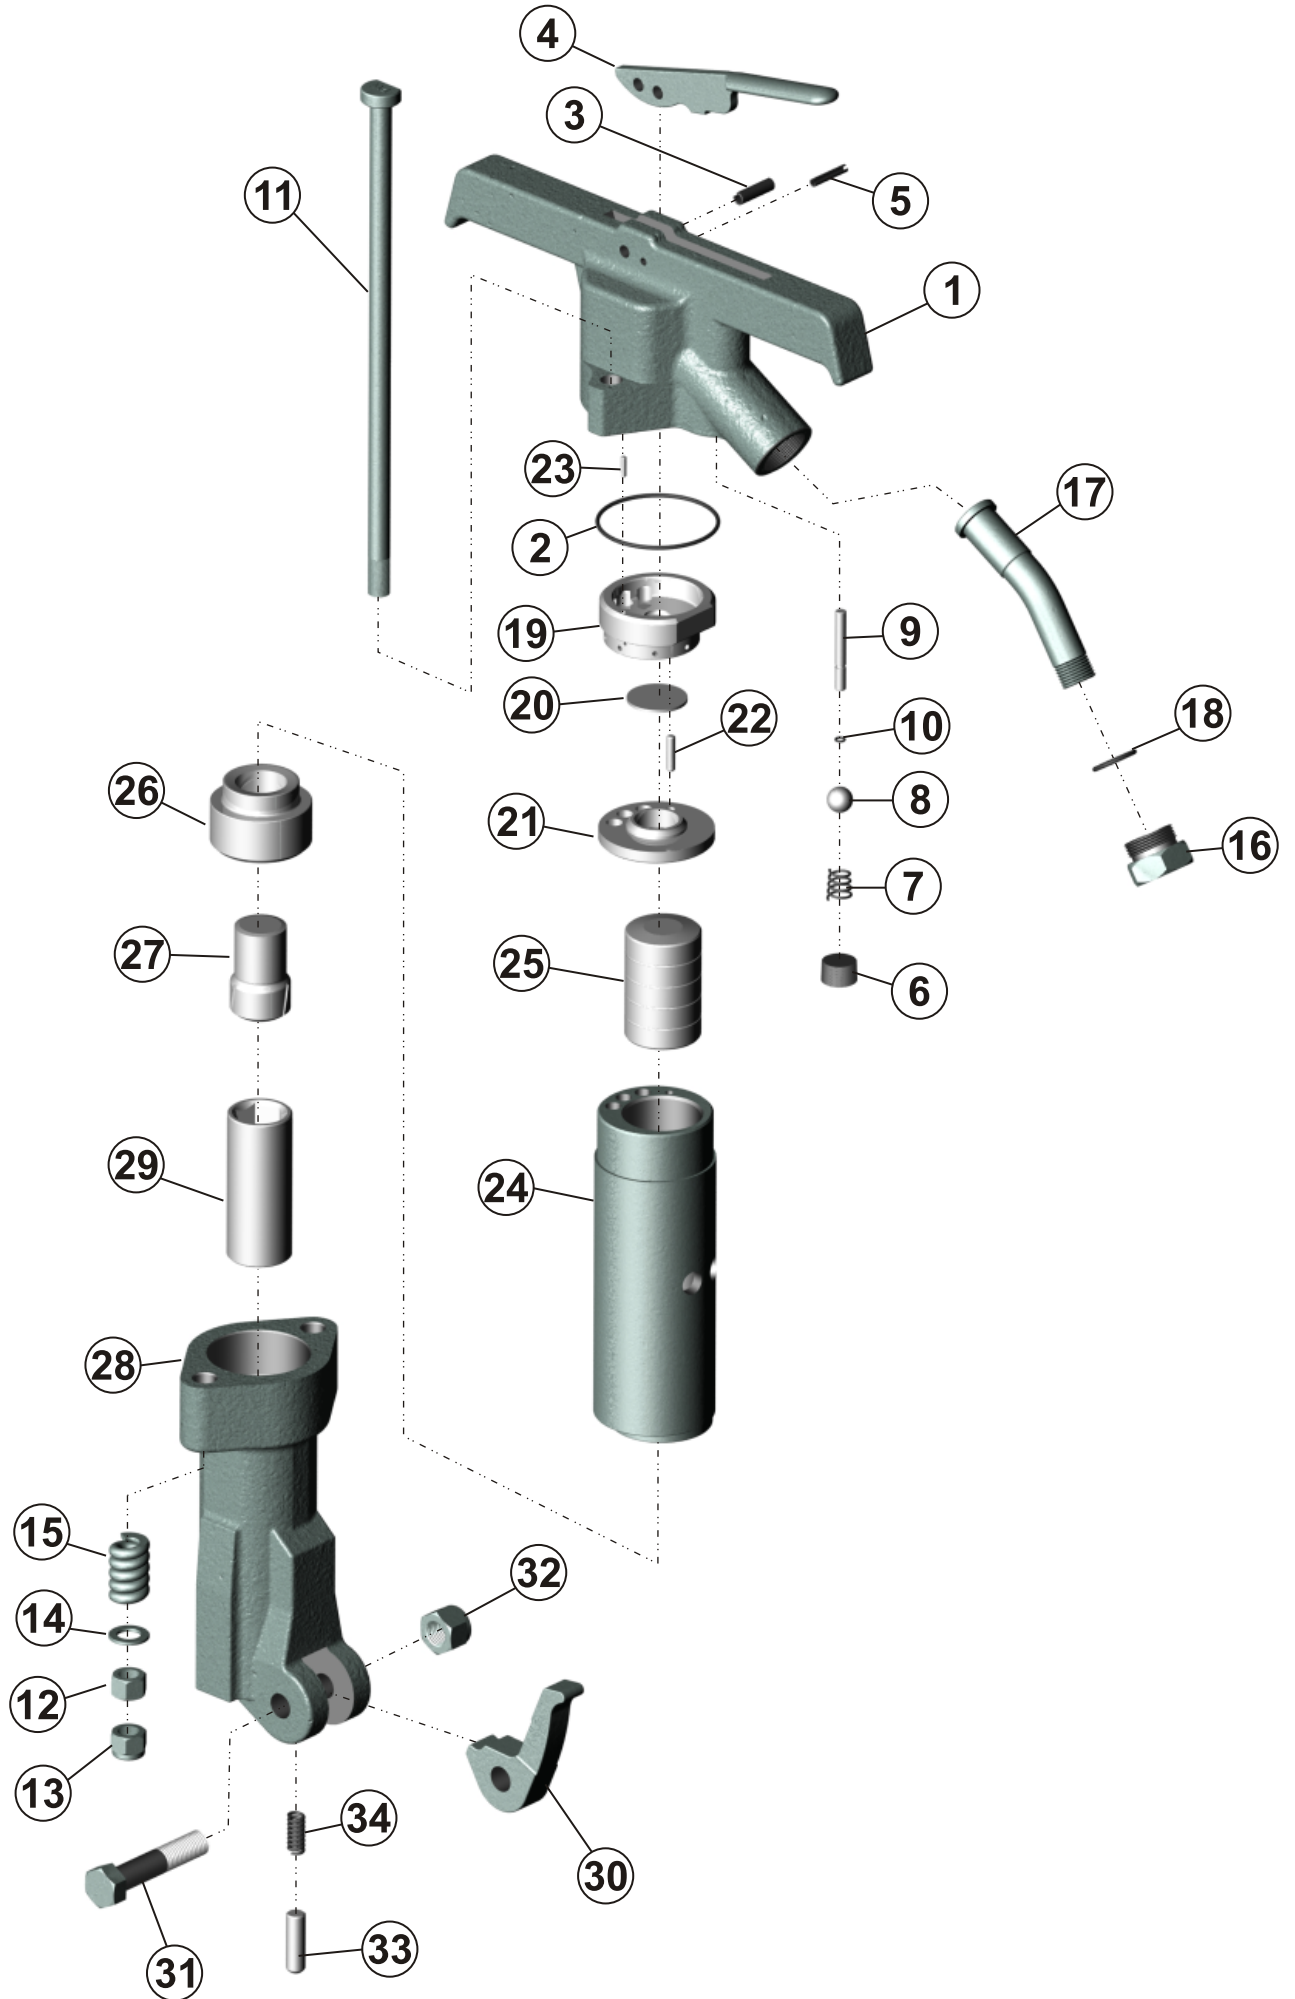

Rompedor Pneumático Manual

PWHR-30 / PWHR-40

ITEM	PEÇA CÓD. (PWHR-30)	PEÇA CÓD. (PWHR-40)	DESCRIÇÃO	QTD.
1	PW-0139	PW-0140	CABECOTE	1
2	PW-0141	PW-0142	ORING	1
3	PW-0143	PW-0143	PINO ELASTICO	1
4	PW-0144	PW-0144	GATILHO	1
5	PW-0145	PW-0145	PINO ELASTICO	1
6	PW-0146	PW-0146	TAMPAO	1
7	PW-0147	PW-0147	MOLA	1
8	PW-0148	PW-0148	ESFERA	1
9	PW-0149	PW-0149	PINO DE ACIONAMENTO	1
10	PWH-0424	PWH-0424	ORING	1
11	PW-0150	PW-0151	TIRANTE	2
12	PW-0152	PW-0153	PORCA SEXTAVADA	2
13	PW-5799	PW-0572	PORCA PARLOCK	2
14	PW-5801	PW-0595	ARRUELA	2
15	PW-0156	PW-0157	MOLA	2
16	PW-0158	PW-0158	ADAPTADOR	1
17	PW-0160	PW-0160	CURVA DE AR	1
18	PW-0162	PW-0162	ORING	1
19	PW-0163	PW-0164	CAIXA DE DISTRIBUICAO	1
20	PW-0165	PW-0165	VALVULA AUTOMATICA	1
21	PW-0166	PW-0167	TAMPA/VALVULA	1
22	PW-0168	PW-0168	PINO	1
23	PWH-0417	PWH-0417	PINO	1
24	PW-0169	PW-0170	CILINDRO	1
25	PW-0171	PW-0172	PISTAO	1
26	ESP-0448	ESP-0450	INTERMEDIARIA	1
27	ESP-0447	ESP-0449	PISTONETE	1
28	PW-0177	PW-0178	CABECOTE INFERIOR	1
29	PW-0179	PW-0179	BUCHA SEXTAVADA	1
30	PWH-0180	PW-0180	SEGURADOR	1
31	PWH-0181	PW-0181	PARAFUSO	1
32	PWH-0181P	PW-0181	PORCA PARLOCK	1
33	PW-0182	PW-0182	PINO DO SEGURADOR	1
34	PW-0183	PW-0183	MOLA	1